

TROUBLESHOOTING


- Under normal operation the LED should light when the unit has been supplied power.

If the LED does not light:

1. Check to be sure there is power to the unit.
2. Be sure lamp connector is fastened securely.
3. If the LED still does not light, replace lamp.
4. If still not operating, replace ballast.

WARRANTY

The manufacturer warrants the DUV401H-16 air purification unit against defects in materials and workmanship for a period of four (4) years from the date of installation. Lamps carry a warranty for the useful life of the lamp, two (2) years . This warranty does not cover broken lamps due to shipping, installation or handling. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

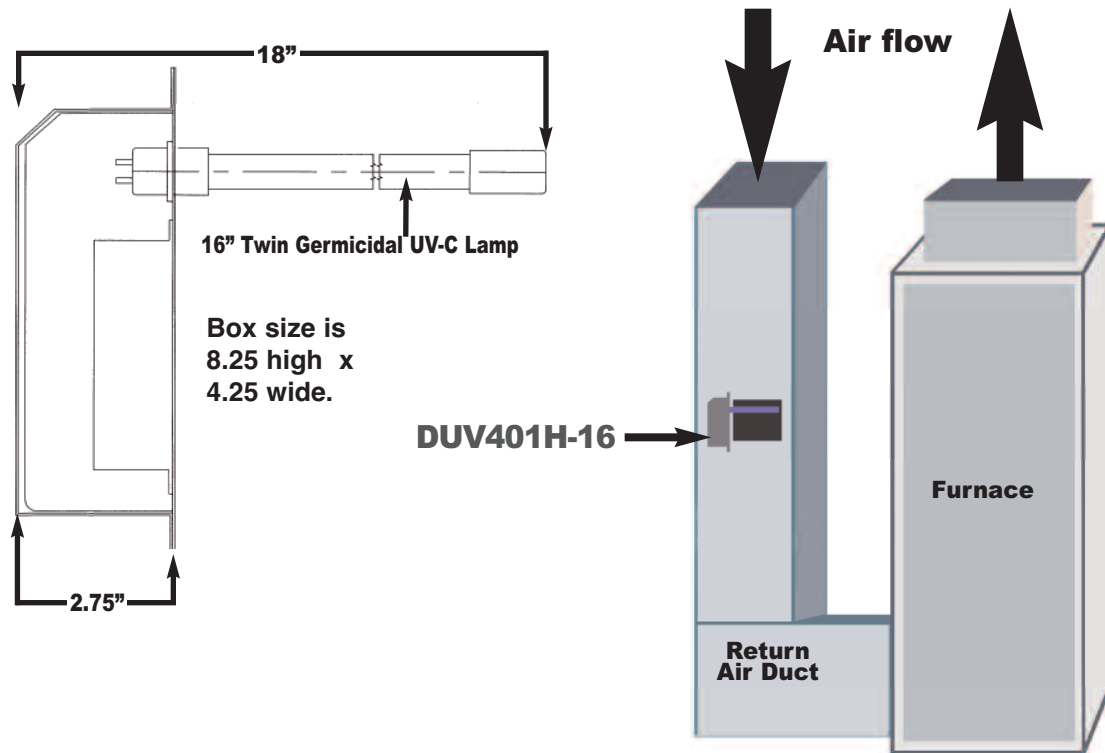

PREMIERONE™

DUV401H-16 GERMICIDAL AIR PURIFIER

INSTALLATION MANUAL

UNPACKING THE UNIT

Each DUV401H-16 Air Purifier unit is shipped with the germicidal lamp placed in a lamp box. Carefully remove lamp from the lamp box taking care to not touch the glass portion with bare hands. Oils from the hands can cause "hot spots" which reduce lamp life. Handle by the plastic end cap or use a soft cloth. If you accidentally touch a lamp, wipe it off using a soft cloth dampened with rubbing alcohol. The lamp is fragile and proper care must be taken when removing from packaging.



Be sure the following parts are included:

- DUV401H-16 Air Purifier
- 16" Germicidal Twin H Lamp (packed in lamp box)
- Four Sheet Metal Screws
- Installation & maintenance instructions
- 120 VAC Power Cord (PC-120)

IMPORTANT: SAFETY INSTRUCTIONS **IMPORTANT: Instructions de sécurité**

When installing and using this electrical equipment, basic safety precautions should always be followed including the following:

- 1. READ AND FOLLOW ALL INSTRUCTIONS.**
- 2. SAVE THESE INSTRUCTIONS.**
3. Always be sure the unit is unplugged during installation or service procedures.
- 4. The ultraviolet light produced by the UV lamp is harmful to your eyes. Do not look directly at the lamp. Should it become necessary to view the lamp, use UV-protected sunglasses.**

Lors de l'installation et de l'utilisation de cet équipement, des précautions devront être suivies.

- 1- Lire et suivre les étapes attentivement.**
- 2- Conserver ces instructions.**
- 3- Assurez vous de toujours débrancher avant l'installation ou le service.
- 4- Ne pas regarder la lampe directement avec les yeux. Si nécessaire de le faire, veuillez porter les lunettes de soleil contre les rayons U.V.**


INSTALLATION

- Best results are achieved when the unit is installed where the HVAC system air temperature is most constant. Therefore, the preferred installation is on the *return side* of the furnace. If return side installation is not possible, install the unit on the supply side, keeping it as far from the heat/cooling source as possible, and in the main airstream.

- Do not locate the unit within 20" of any plastic material that will be directly exposed to the UV light, such as a return side humidifier or certain types of air filters. Check with the filter manufacturer to see if their material is UV resistant. Over time, UV light will degrade many plastic materials.

- Do not touch the glass portion of the lamp with bare hands because oils from the hands can cause "hot spots" which reduce lamp life. Handle either by the plastic end cap or use a soft cloth. If you accidentally touch a lamp, wipe it off, using a soft cloth dampened with rubbing alcohol.

1. Cut out the indicated area of the installation template. (See page insert) Center the template on the longitudinal axis of the plenum using tape to hold it in place. Trace the hole pattern for the unit and mark centers for mounting screws.
2. Drill 9/64" holes for sheet metal screws & cut opening for the unit.
3. Attach unit to air duct using the four sheet metal screws provided.
4. Remove the cover from the unit by removing the top and bottom retaining nuts using a 11/32 size nut driver.

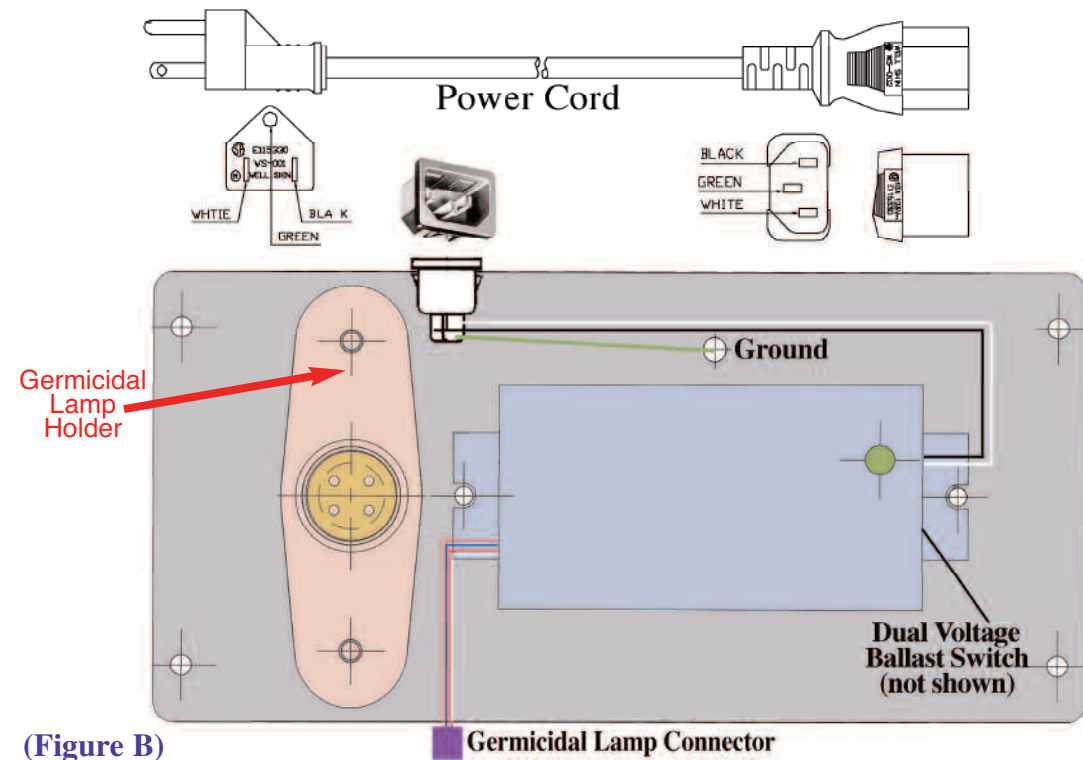

(Figure B)

5. Remove germicidal lamp holder (Figure B) using a 11/32 size nut driver.
6. Slide germicidal lamp into lamp opening and reinstall lamp holder
7. Plug in lamp connector to the end of lamp.
8. Supply power by wiring unit according to instructions below.
9. Replace and secure cover using the two retaining nuts.



(Figure A)

WIRING

There is no need to cycle the DUV401H-16 germicidal air purifier with the furnace blower. Install the provided 120 VAC power cord and plug the unit into a 120 VAC outlet. Allow unit to run continuously. The ballast is factory set at 120 VAC. For installations that require 240 VAC locate the 120 / 240 volt power selector on the ballast and set for correct voltage. (Figure A) Connect in accordance with local wiring codes. An optional 240 VAC power cord available, Part #PC-240.

MAINTENANCE

This maintenance schedule is only a guideline, determined by average conditions. Actual conditions will dictate the frequency of cleaning and/or replacement of lamps. Do not touch the glass portion of the lamp with bare hands because oils from the hands can cause "hot spots" which reduce lamp life. Handle either by the plastic end cap or use a soft cloth. If you accidentally touch a lamp, wipe it off, using a soft cloth dampened with rubbing alcohol.

CLEANING THE LAMP - Recommended interval: 12 months

1. Unplug the power cord from the outlet, or disconnect power to the unit.
2. Remove the cover from the unit by removing the top and bottom retaining nuts using a 11/32 size nut driver.
3. Unplug the lamp connector from the end of the lamp.
4. Remove lamp holder using a 11/32 size nut driver. (Figure B)
5. Remove the lamp by grasping the plastic end cap and extract carefully.
6. Using a soft cloth moistened with rubbing alcohol, wipe down the lamp. If there is a large build-up of dust particles, you may wish to use a can of air first. Always handle lamp by the end cap.
7. Slide the lamp back into lamp opening and reinstall lamp holder.
8. Plug the lamp connector to the end of the lamp.
9. Replace and secure cover using the two retaining nuts.
10. Plug power cord back into outlet, or restore power to unit.

REPLACING THE LAMP - Recommended interval: 24 months


Replacement lamps are available through your HVAC contractor.

Follow above procedure excluding #6.

(Please note standard off-the-shelf lamps are not compatible with this
Use of improper lamps will void warranty.)

(Page Insert)

DUV401H-16 INSTALLATION TEMPLATE

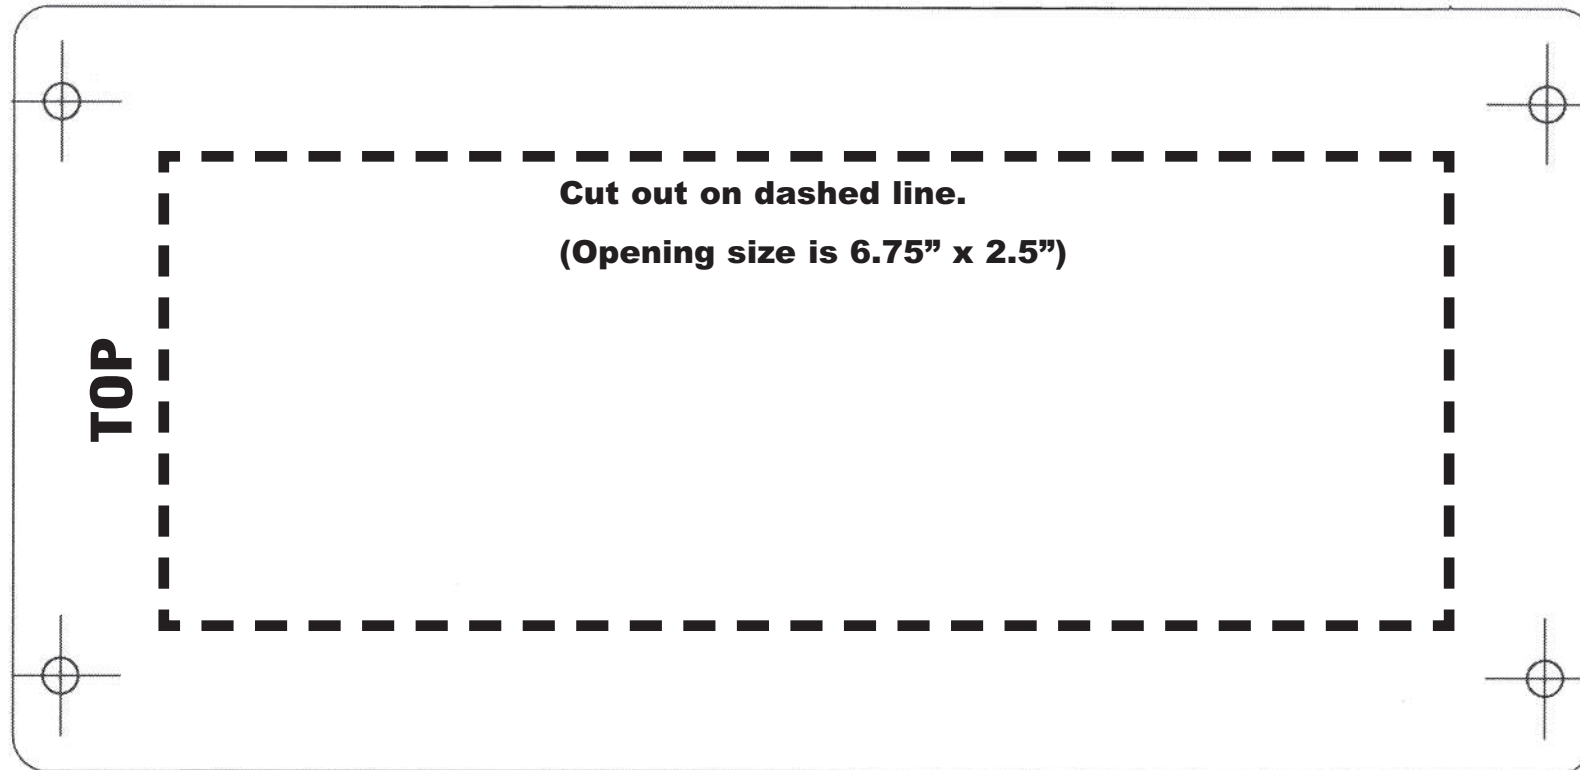

1. Cut out area of template indicated by the dotted line.
2. Place template on the return path of the HVAC system and trace the hole pattern for the unit and mark centers for mounting screws.
3. Drill one 9/64" hole at each of these locations \oplus for sheet metal screws.
4. Cut opening for the unit.
5. Install unit into air duct using the four sheet metal screws provided.